


## STEP 1

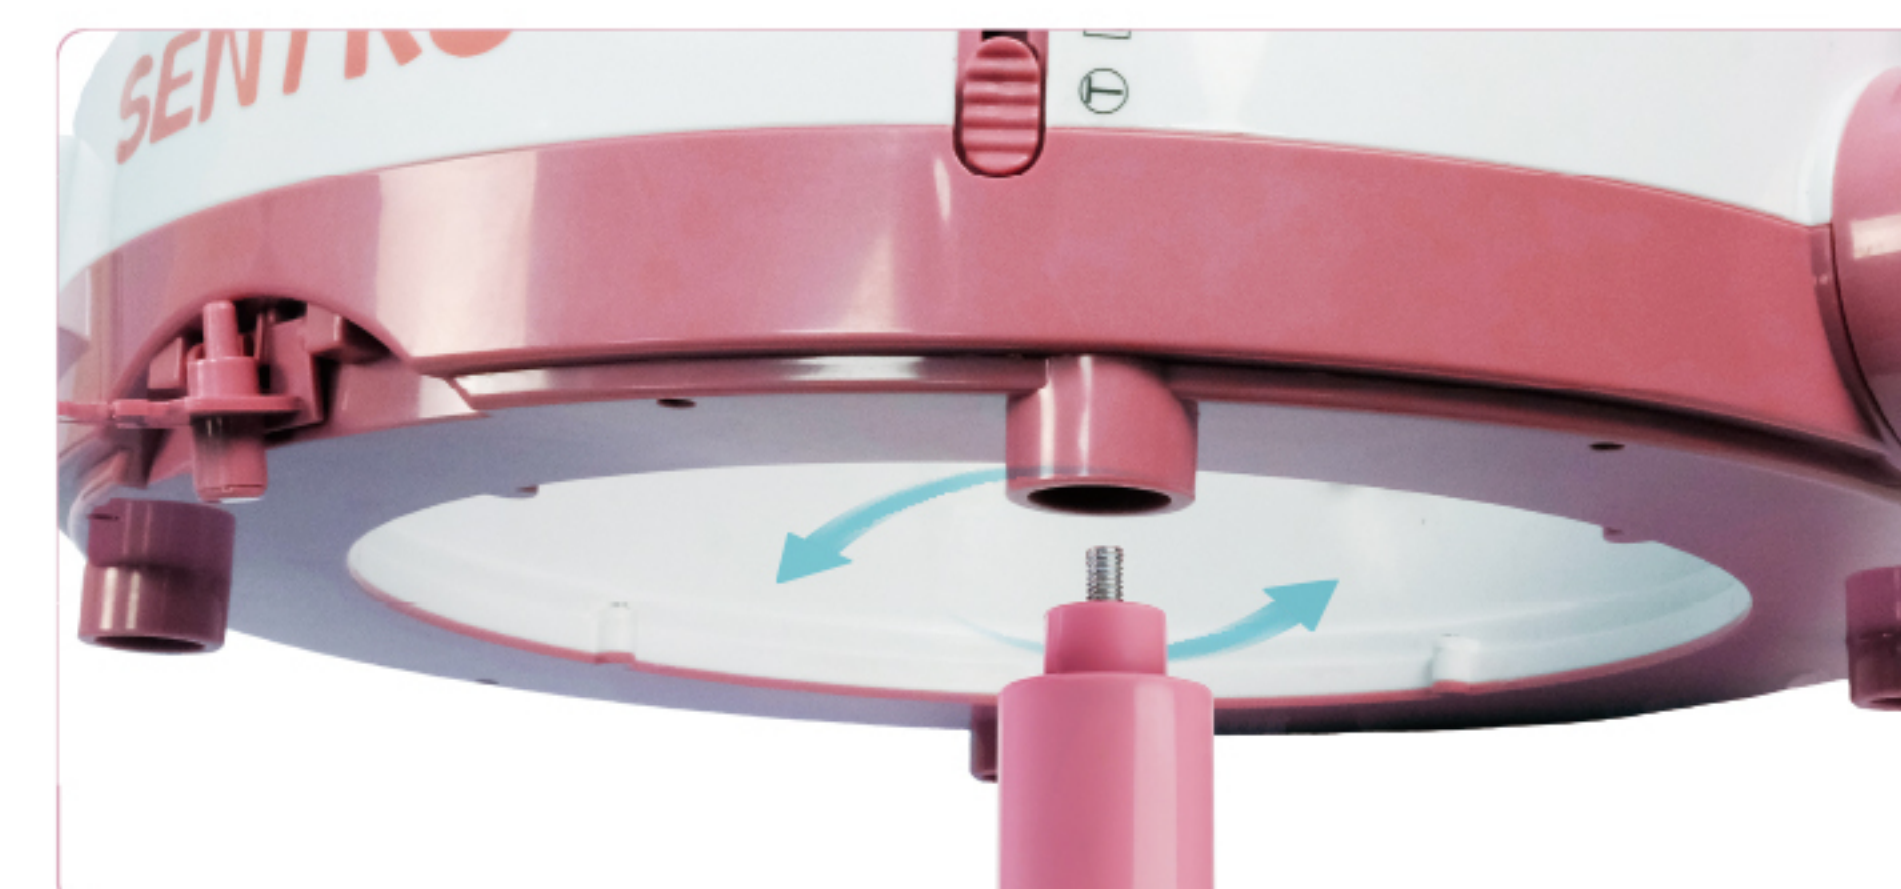


Insert the brackets into the grooves in the bottom of the machine body, and tighten the brackets.

## STEP 2



Peel off the isolation paper from the anti-slip pads and place them into the grooves at the bottom of the brackets.

## STEP 3

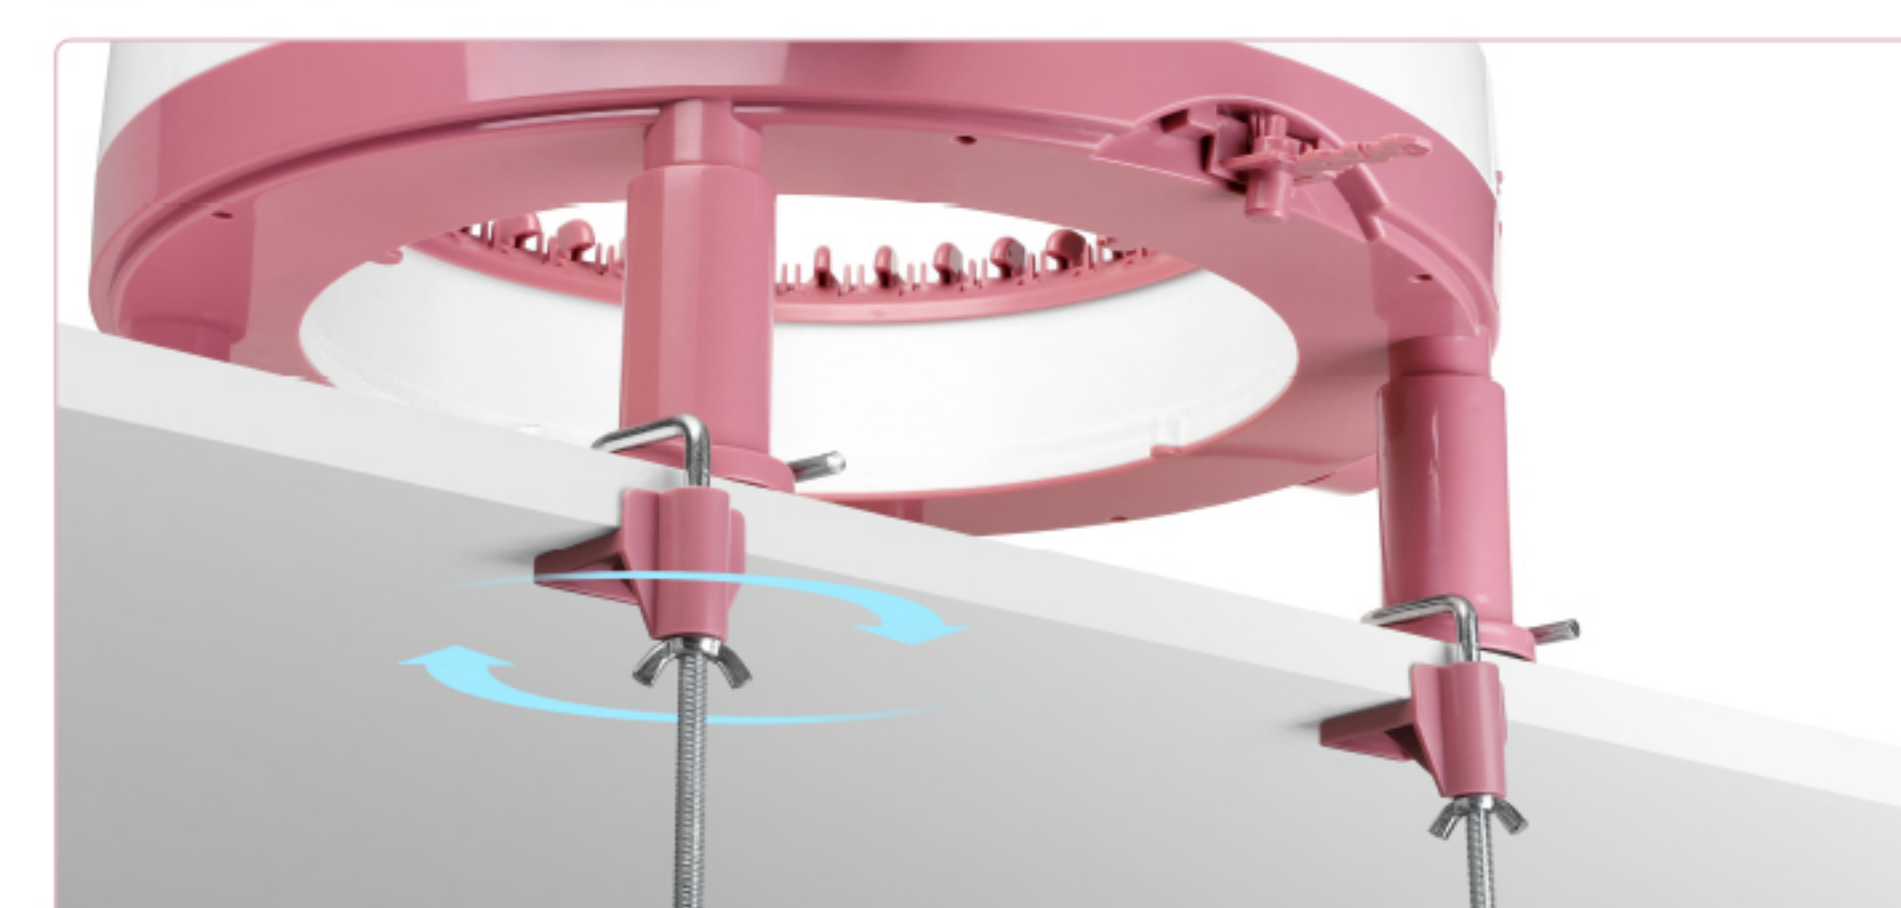

Hook the bent part of the reinforcement brackets onto the brackets, adjust the position of the butterfly lock according to the height of the desktop, tighten the reinforcement brackets, and finish.

## How to start?

Scan for details:



↓ ① Switch Down: Tube Knitting



↑ ② Switch Up: Panel Knitting